itec DC 4,6,8 station Dual Program

INSTALLATION INSTRUCTIONS

Remove the lower cover. Place the unit on the wall using one slot and one fixed hole under the terminal.

9 VOLT VALVE

A 9 volt, Pulse operated solenoid must be used with this controller. Make sure that the valve you purchased is equiped with the right solenoid. (2 wires each with different color) Connect the RED wire from each solenoid valve to a separate STATION No. terminal. Connect the BLACK wire from each solenoid valve to the terminal marked "C"- Common.

Connect the wires FIRST before installing the battery. When battery is connected, the controller checks the valves position tomake sure they are all in close position!

To install the battery, press on the drawer located on the right side of the controoler, pull it out, place the 9 volt battery inside and push back. Low battery indication will start flashing when battery is low. Replace battery.



3 ways solenoid, pulse operated, rated 6-20 volt with 2 wires, in different colors, can be used to operate hydraulic valves.

THE CONTROL PANEL



THE CONTROL BUTTONS



NEXT STEP Advance to next programming step.

ne. V



Advance Days & station No. In Watering Time position Will lead you to % scaling.



Decrease TIME & Watering Time. Used also as OFF for Days OFF & Manual OFF.

DISPLAY ICONS

Days of the week - upper line

OFF flashing - Low battery

Programming Steps - Watering Time, Days On/Off, 3 start times Manual and Auto-Run

Days Cycle - Will be ON when programming Days Cycle

PI or PII - Program I or II

OFF - RAIN OFF Icon

2 - Station No. Icon

IRRIGATION PROGRAM

Irrigation program consists of 3 parameters:



1 Watering duration for each station 2 Irrigation days 3 Program start time

Each station can be assigned to a program by entering Water Time in that program. Stations can be assigned to both programs.

PROGRAMMING STEPS

NOTE If you pres	as $\not+$ or \bigtriangledown continuously, the digits will advance quickly.
SET TIME/DAY	After connecting the battery, the controller should display the "SET TIME/DAY" Icon.
	If not, Press until it is displayed.
	Press 🕞 until current day is displayed.
	Press 4 or $\overline{\bigtriangledown}$ to set current time.
0	Press 💓 to enter watering time.
WATERING TIME PI	Enter Watering Time to all stations you wish to assign to this program. Each station can be programmed to have different Watering Time.
	Press $\land + \land$ or \bigtriangledown to set the watering time.
	Press >>> to select your next station in this program.
	Repeat for all the stations.
2	Press 💭 to advance to next programming step.
DAYS ON/OFF PI	You can either select the days of the week you wish to water or select days cycle. SU is flashing.
	Press 4 for the days you wish to water.
	Press 😾 for the days you wish to skip irrigation.
DAYS CYCLE PI	Press 🕞 until "DAYS CYCLE" is displayed.
	Press \triangle or \bigtriangledown to select your days cycle.
	Notic that two sets of digits are displayed (00). The right digit will display the selected days cycle while the left digit will display the remaining days to irrigation. If 1 is selected = Every day. 2=Every other day. 3=once every 3 days and so on.
3	Press 💓 to program the start time.
START TIME	Press $\cancel{+}$ or $$ to set the time. (Notic the AM & PM).
PI	Press 📲 to set next (2nd) start time.
At the time you select other, automatically.	cted, the 1st station of Prog. 1 will start watering. Other stations in this program will operate sequentially, one after the
To enter program 2 (PII) Press and repeat from 1 to 3.
To skip program 2, P	Press 💓 continuously until you reach Manual .
IMPORTANT: A dela	ay of 2-3 sec. between pressing ON or OFF to the actual response of the valve was design to save energy
MANUAL	NOTE To get to Manual mode from any position, press entinuously.
	Two MANUAL modes are available:
	Manual start per station (only that station)

Press \land to open the station. (Station lcon will stop flashing)

Press 🕎 to turn off the station.

MANUAL (cont.)	Press 🕞 to select your next station.	: +
	If you leave the station ON, it will close after it's programmed watering time. First priority is watering time program 1, 2nd priority is watering time program 2, and if no watering time was programmed, will open for 2 minuts. After the station is closed, the controller will skip to AUTO mode.	irrigation systems Itd.
	Press 🖭 to select next manual mode.	
	Manual start per program - Semi-Auto	
	In this step, you can turn on all the stations programmed in program 1 or program 2. The valves will open in sequence. The 1st programmed station in this program will flash.	
	Press 4 to start the cycle and $\overline{\bigtriangledown}$ to terminate it.	
	Press 📰 to select program 2. repeat as in prog.1	
	Press 📰 to advance to AUTO mode. Will turn off all stations.	
AUTO-RUN/OFF	Will display Time & Day, open station, power failure and OFF.	
	Press 😾 in AUTO mode to stop irrigation.	
	Press $/+$ in AUTO mode to resume irrigation.	
WATER BUDGET PI & PII	When you wish to either increase or decrease watering time for all stations in a program, you can do it b percentage scaling. Your current setting of watering time represent 100%. You can get to Water Budget position from any Watering Time position.	y using
	Press $ ightarrow$ until you pass all stations and display show 100 and the active stations in that program are f	lashing.
	Press \wedge to increase and \bigtriangledown to decrease the percentage.	
	EX: If stations in PI are set at 10 minutes runtime and you increase percentage to 150%, they will now run 15 minutes each.	
	Press 🖼 to skip to MANUAL mode.	

IMPORTANT INFORMATION

- The $\left(\overset{\text{NEXT}}{\leftarrow} \right)$ button leads you through the programming steps. •
- Auto Return: If within 3 minutes you do not touch any button, the controller will automatically return to Auto mode except from MANUAL mode.
- Quick Digit advance: If you Press /+ or continuously, the digits will advance quickly. •
- Reset display back to OFF: If you press A and ∇ simultaneously and hold for few seconds, the digits displayed will reset back to OFF. •
- Program Erase: In Auto Run mode, press 4 and $\overline{\bigtriangledown}$ simultaneously until arrow starts to flash. It will flash 5 times to complete Program Erase. •

COPYRIGHT AND TRADEMARKS

The copyright in this document is held by I.T. Irrigation Systems Ltd. All material provided on this documents protected under United States copyright laws and international copyright laws and treaty provisions. Except as expressly provided herein, none of the materials provided on this documents may be copied, distributed, republished, reproduced, downloaded, displayed or transmitted in any form for commercial use without the prior written permission of I.T. Irrigation Systems Ltd. Individual visitors of this document permitted to download or print one copy solely for their personal, non-commercial use, provided that they do not modify the materials and that they retain all copyright and other proprietary notices contained in the materials. This permission terminates automatically if you breach any of the terms and conditions contained herein. I.T. Irrigation Systems Ltd. does not grant any express or implied right to you under any patents, trademarks, copyrights or trade secret laws. The trademarks, logos and service marks (collectively referred to as "Trademarks") displayed on this document are registered and unregistered Trademarks of I.T. Irrigation Systems Ltd. and no trademark license either express or implied is granted by I.T Irrigation Systems Ltd. You do not have any right to use any Trademark displayed on this document without prior written permission of I.T. Irrigation Systems Ltd. Trademarks are one of our most valuable business assets. In the event of unauthorized use or misuse of its Trademarks I.T. Irrigation Systems Ltd. will pursue its legal remedies without delay.

I.T. Systems Ltd. Moshav Batzra, PO.B 380, 60944 ISRAEL TEL: 972 9 7411734 FAX: 972 9 7411732 EMAIL:itsystem@netvision.net.il